

N3200_MB_Replacement_SOP

1. If you want to replace the motherboard of N3200 with N3200PRO's, please refer to the following SOP:
http://www.thecus.com/Downloads/N3200_MB_replacing_SOP_2008-02-21.pdf
2. If you want to convert the existing data on RAID created by old N3200 system to the new board, please make sure your Firmware version is v1.00.02.RMA4 before processed.

If the Firmware version failed to match the requirement, please download this Firmware from the following URL:

http://www.thecus.com/Downloads/N3200PRO_FW.1.00.02.RMA4.bin

3. After the Firmware version matched, please do the following procedure to convert the existing data on the RAID.
 - a. Insert hard drives into your N3200
 - b. Turn on N3200
 - c. N3200 will transfer the RAID to new format automatically.

At this stage, Web UI is still not accessible and you will see the LCD display as below:



- d. After the long beep sounds, RAID transfer is completed and then Web UI becomes accessible.
- e. *Copy the existing data from the N3200 to other storage device first.
- f. *After copied, remove the current RAID array
- g. *Upgrade your N3200 to the latest FW for N3200PRO.
- h. *After upgraded and rebooted, reset to factory default from Web UI.
- i. Now you can create a new RAID with the new N3200PRO M/B.
- j. Copy all the backup data back to the new unit and set the desired ACL.