

How to Install a Mini-UPS

Prerequisites

-None

Necessary Tools

-One Thecus NAS
-One Mini-UPS




Applicable Models

-N4200 and N4200PRO

A Mini-UPS is a backup battery that automatically takes over if the power source is cut off. Your Thecus NAS will continue to run normally for one minute before it begins shutting down safely. This is because many times power outages last less than one minute, solving the problems of accidental unplugging and unstable power connections. Despite having 10 minutes of power, the NAS shuts down after 1 minute because this is a safety valve, and without a proper shutdown all the information in the RAM cache would be erased and there could be permanent damage to your data. The purpose of this battery is to prevent data loss.

The installation takes 4 simple steps:

1. Ensure that the Thecus® NAS is completely powered down.
2. Be careful not to allow the metal pins of the battery to come in contact with any other metallic or electrically charged objects.
3. Plug the Lithium-ion battery into the rear battery slot and tighten the Phillips screw to secure the battery.
4. After installing the battery, please continue with the

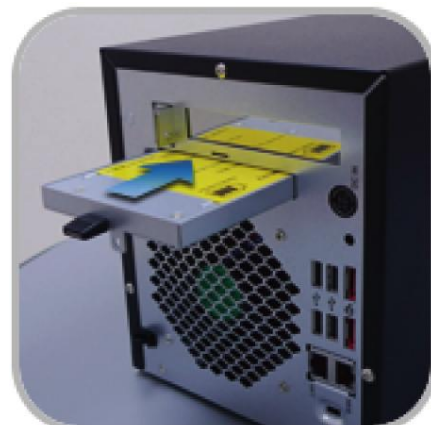

normal Thecus® NAS setup (refer to the included Quick Installation Guide).

For any questions regarding this How To Guide, please email us:

webmaster@thecus.com

--End--