


How to Transfer ADS/NT Server User Groups to Thecus NAS

With Thecus ADS/NT support, companies that have deployed an AD (Active Directory) or Windows NT server to handle domain security can import users and groups directly from AD or Windows NT server into the Thecus NAS simply and conveniently.

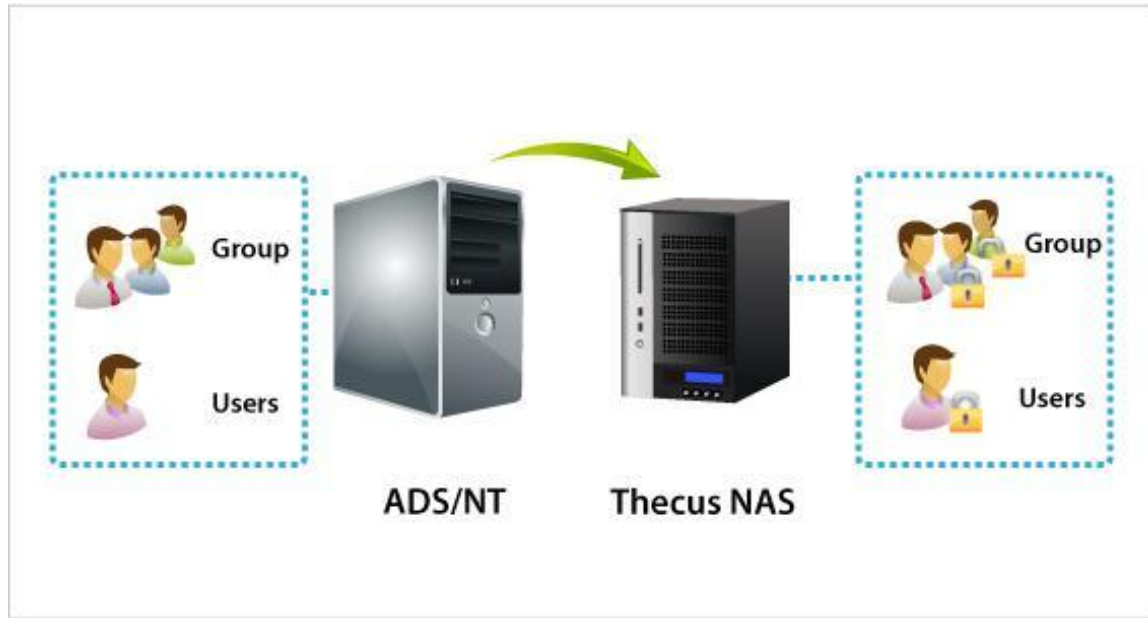

Please carefully read the following notes before you begin:

NOTE

- The DNS server specified in the WAN configuration page should be able to correctly resolve the ADS server name.
- The time zone setting between Thecus NAS and ADS should be identical.
- The system time difference between Thecus NAS and ADS should be less than five minutes.
- The Administrator Password field on the ADS/NT support page is for the password of the ADS (Active Directory Server) not the Thecus NAS.


Content

Part 1 - Join Thecus NAS with ADS/NT


Part 2 - Synchronize domain users/groups from ADS/NT

Part 1 - Join Thecus NAS with ADS/NT


1. In the Web GUI, click on **User and Group Authentication > ADS** to open the **ADS/NT Support** page.

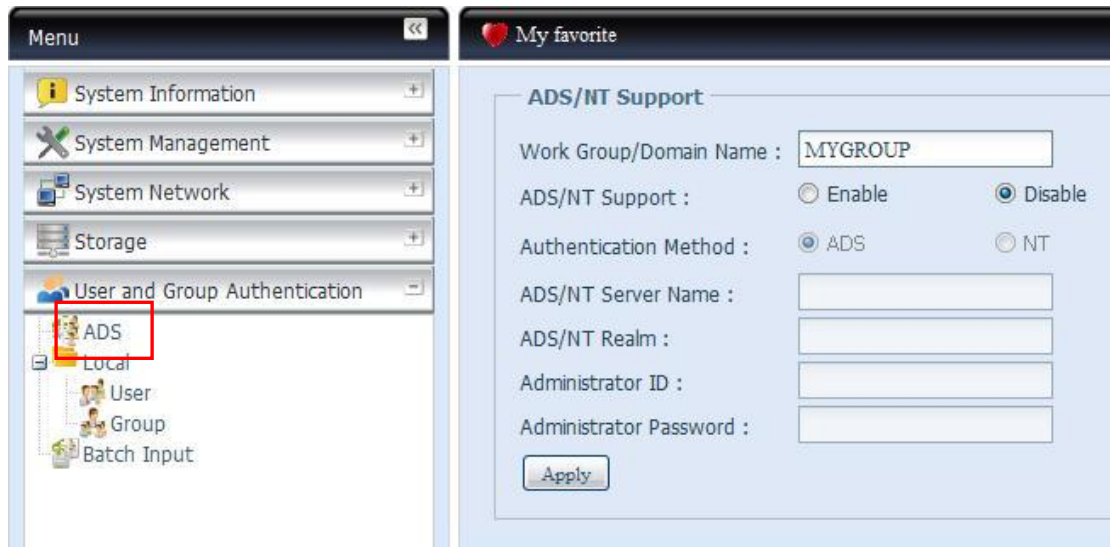

*Please refer to the below screen shot and use it as an example to configure the associated fields on the **ADS/NT Support** page.

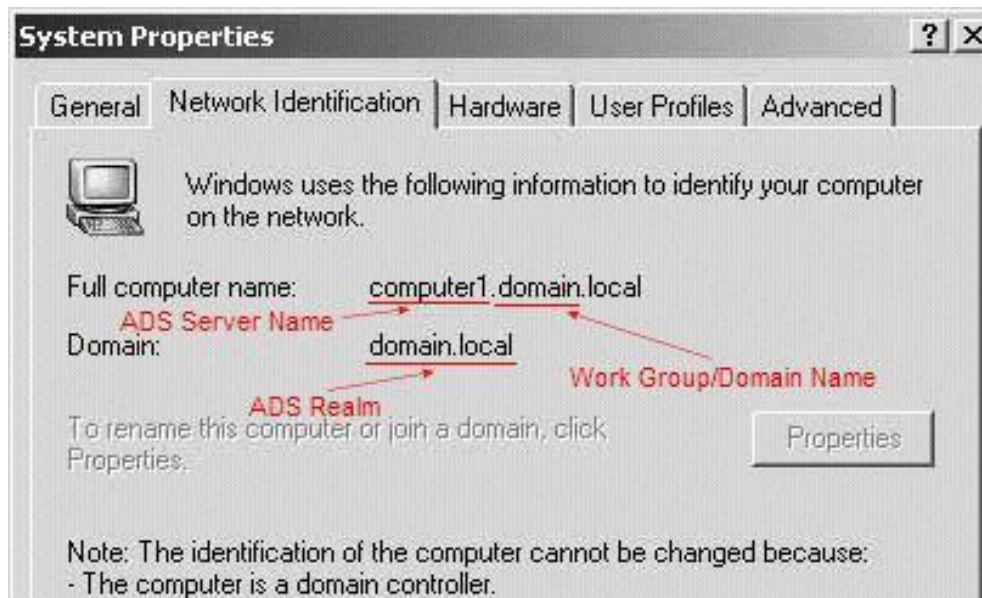

2. When completed, please click **Apply** to proceed.

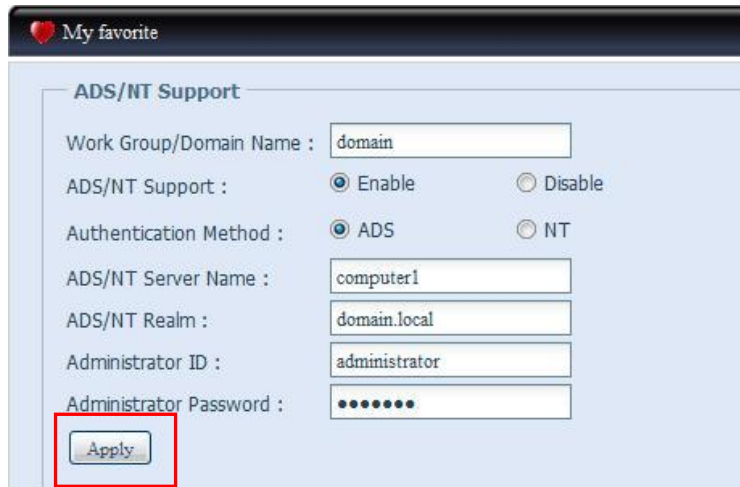

My favorite

ADS/NT Support

Work Group/Domain Name :

ADS/NT Support : Enable Disable

Authentication Method : ADS NT

ADS/NT Server Name :

ADS/NT Realm :

Administrator ID :


Administrator Password :

Apply

NOTE

- The Administrator ID and Password field are for the ID and password of the ADS (Active Directory Server) not the Thecus NAS.

3. The following dialogue will appear. Click **Yes** to proceed.

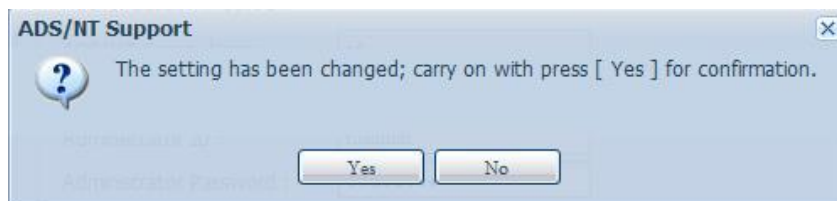


ADS/NT Support

The setting has been changed; carry on with press [Yes] for confirmation.

Yes **No**

4. The following dialogue will appear. Click **OK** to proceed.

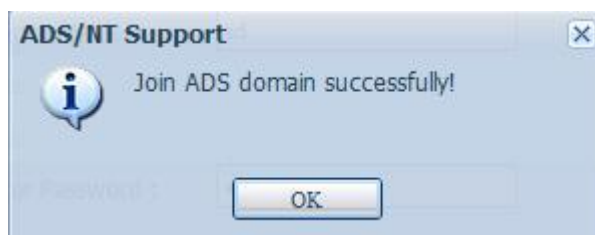

ADS/NT Support


Join ADS domain successfully!

OK


Part 2 - Synchronize domain users/groups from ADS/NT

Now that the domain users and groups have been imported successfully into your Thecus NAS, let's take a look at how to synchronize ADS/NT with your Thecus NAS when users or groups have been modified on the ADS/NT.


1. Click on **Storage > Share Folder** to open the **Folder** page.

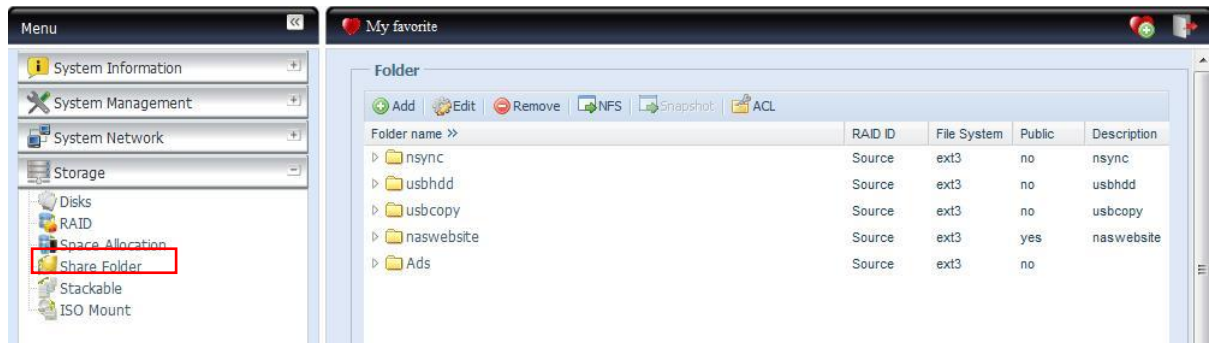


2. On the **Folder** page, click on any folder that is set to Public **"No"** and click on the **ACL** button to open the **ACL setting** page.

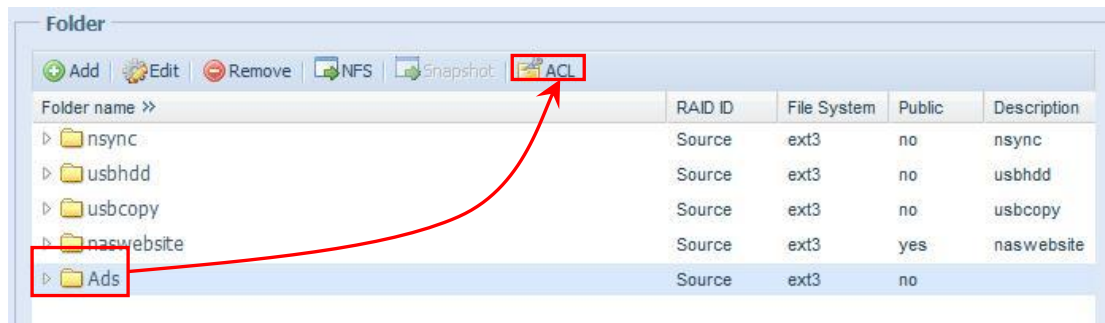

*On the ACL setting page, ADS/NT domain groups and users will appear in **Blue** and **Orange** on the left hand side of the page. Please see the screenshot below:

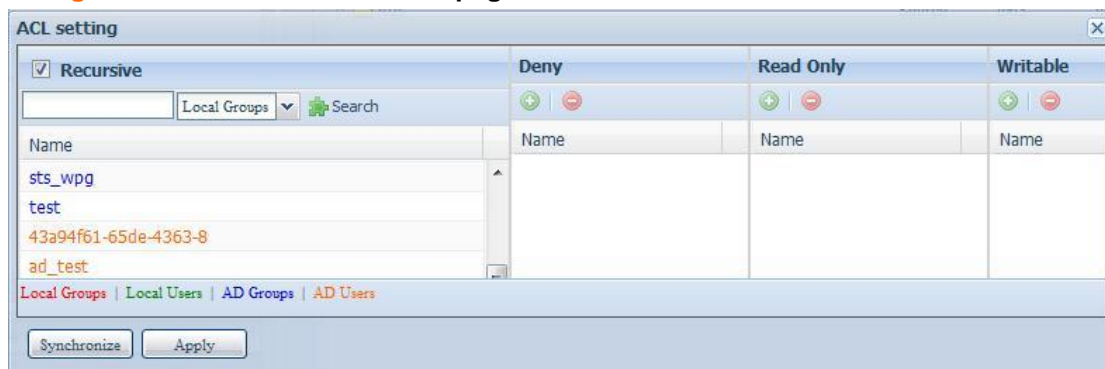

3. To synchronize ADS/NT with your Thecus NAS, simply click the **Synchronize** button.

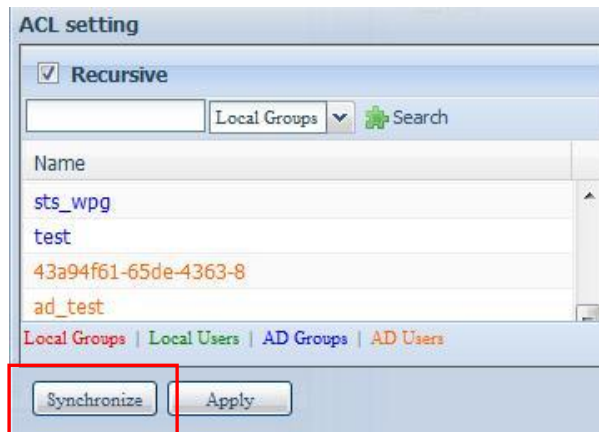

***List of domain users and groups will now update according to the changes made on the ADS/NT.**

For more Thecus How-to guides, please go to:

[Thecus Classroom](#)

For any questions regarding this How-to Guide, please email us:

webmaster@thecus.com

Copyright © 2011 Thecus Technology Corporation. All rights reserved.